

REPLACEMENT PARTS GUIDE

4320 Compact Utility Tractor

ENGINE

ENGINE OIL



TY26668 (10W-30 PLUS 50 II) (CRANKCASE W / FILTER - 7.5L (7.9 qt))

Change Every 400 Hrs.

TRANSMISSION OIL



TY6342 (LOW VISCOSITY HY-GARD) (POWER REVERSER MODEL - 38.9L (10.3 gal) E HYDRO MODELS - 36.1 L (9.6 gal))

Change Every 400 Hrs

OIL FILTER



RE519626

Change Every 400 Hrs

PRIMARY AIR FILTER



AP33330

Replace annually or as required.
(Service more if in extremely dusty conditions).

SECONDARY AIR FILTER



AP33331

Replace annually or as required.
(Service more if in extremely dusty conditions).

JOHN DEERE MULTI-PURPOSE HD LITHIUM COMPLEX GREASE



TY24416

GREASE GUN



TY26518

Replace as required.

FUEL FILTER



RE508202 (USE WITH 4024TLV01 - 4024TLV10)

RE533026 (USE WITH 4024HLV11)

Change every 400 Hrs.

V - BELT



DZ118732

CAB

FRESH AIR FILTER



MIU10010

Clean and or replace after every 50 hours and as required.

RECIRCULATION AIR FILTER



MIU10011

Clean and or replace after every 50 hours and as required.

FUEL AND AIR

FILLER CAP



R515057

MUFFLER



LVA12690 (S/N - F640000)

LVA14733 (S/N F640001 -)

ELECTRICAL

ROTARY SWITCH



LVA21501

BATTERY



TY26442 (12V)

HEADLIGHT



LVA13747

KEY



RE183935

ENGINE

TRANSMISSION OIL FILTER



LVA13038

Change Every 400 Hrs.

HYDRAULIC FILTER



LVA12726

Change Every 400 Hrs.



JOHN DEERE
Genuine Parts and Service

CLICK PART NUMBER TO BUY

*See operator's manual for additional details.