

# REPLACEMENT PARTS GUIDE

## 4066M Compact Utility Tractor

### ELECTRICAL

#### KEY

[RE183935](#)

#### ROTARY SWITCH

[LVA21501](#)

#### BATTERY

[TY26442B](#) (12 V)

#### LED WORK LIGHT

[AM143579](#) (OOS) (12 V)

#### HEADLIGHT

[R136239](#) (12 V 60/55 W)

### FUEL TANK FILLER CAP

#### FILLER CAP

[AL213202](#)

### TRANSMISSION/ HYDRAULIC

#### TRANSMISSION/HYDRAULIC OIL

[TY22000](#) (47.3 L (12.5 gal.))  
Change after every 400 Hrs. or annually.

#### OIL FILTER

[RE45864](#) (TRANSMISSION)

[LVA10419](#) (HYDRAULIC)

Change after every 400 Hrs. or annually.

#### V - BELT

[TR131486](#) (LGTH = 1112 mm,  
WIDTH = 13.4 mm, TK = 9.6 mm)



### ENGINE

#### ENGINE OIL

[TY26668](#) (10W-30 PLUS-50™ II) (5.4 L (1.4 gal.))  
Change Every 200 Hrs or Annually, whichever comes first.

#### FUEL FILTER

[MIU803127](#)

Change after every 400 Hrs/Annually.

#### AIR FILTER

[RE68048](#) (PRIMARY)

[RE68049](#) (SECONDARY)

Change every 600 hrs. or annually.

#### JD MULTI PURPOSE HD LITHIUM COMPLEX GREASE

[TY6341](#)

#### GREASE GUN

[TY26183](#)

Change As Required.

#### OIL FILTER

[M806419](#)

Change Every 200 Hrs or Annually, whichever comes first.

#### FUEL-WATER SEPARATOR

[MIU803221](#) (SEPARATOR)

[MIU802421](#) (FILTER ELEMENT)

Change after every 400 Hrs. or annually.

#### HOME MAINTENANCE KIT

[TA25765](#)

#### DIESEL PARTICULATE FILTER

[MIU802216](#)

### AXLE

#### TIE ROD

[LVA14951](#) (ASSEMBLY)

[LVA14960](#) (LH)

[LVA14959](#) (RH)

#### FRONT AXLE OIL

[TY22000](#) (John Deere Low Viscosity Hy-Gard™)

Change every 50/400/600 Hrs.