

FILTER OVERVIEW WITH SERVICE INTERVALS AND CAPACITIES

6M Final Tier 4 (FT4) MY20 Series Tractors – 6155M, 6175M, 6195M

ENGINE

DEF LINE FILTER [DZ110513](#)

Replace after every 4500 hours or 3 years, whichever occurs first.

ENGINE

DEF INJECTION PUMP FILTER [DZ114640](#)

Replace after every 4500 hours or 3 years, whichever occurs first.

ENGINE

FINAL FUEL FILTER [DZ115392](#)

Replace after every 750 hours.

ENGINE

PRIMARY FUEL FILTER [DZ115391](#)

Replace after every 750 hours.

ENGINE

SECONDARY AIR FILTER [AL215054](#)

Replace at every fourth change of Primary Air Filter, or after 4500 hours or 2 year, whichever occurs first.

ENGINE

PRIMARY AIR FILTER [AL215053](#)

Replace after every 1500 hours, or 2 years whichever occurs first, or if the relevant information is displayed on the CommandCenter™.

FRONT PTO

OIL FILTER [DE30500](#)

Replace after every 500 hours.

ENGINE

CRANKCASE VENTILATION FILTER [DZ105100](#)

Replace after every 750 hours.

CAB

FRESH AIR FILTER (QTY 2) [AL225552](#)

Replace after every 1500 hours, or 2 years, or with Engine Primary Air Filter, whichever occurs first.

(ACTIVATED CARBON KIT) [AL158986](#)
Never clean. Replace after every 750 hours or 1 year or with Engine Primary Air Filter, whichever occurs first.

CAB

RECIRCULATION AIR FILTER (QTY 2) [L214634](#)

Replace after every 1500 hours, or 2 years, or with Engine Primary Air Filter, whichever occurs first.

(ACTIVATED CARBON KIT) [AL158986](#)
Never clean. Replace after every 750 hours or 1 year or with Engine Primary Air Filter, whichever occurs first.

HYDRAULICS

OIL FILTER [AL169573](#)

Replace after first 100 hours then after first 750 hours and every 750 hours thereafter. Change Transmission Oil Filter as well.

TRANSMISSION


OIL FILTER [AL221066](#)

Replace after first 100 hours then after first 750 hours and every 750 hours thereafter. Change Transmission Oil Filter as well.

ENGINE

OIL FILTER [RE539279](#)

Replace every 750 hours thereafter or annually. The extended 750 hour interval is only allowed if using Plus-50™ II oil, JD OEM Oil Filter and diesel fuel with sulfur content less than 15mg/kg (15 ppm). Change Oil and Filter after every 500 hours, if conditions are not met.

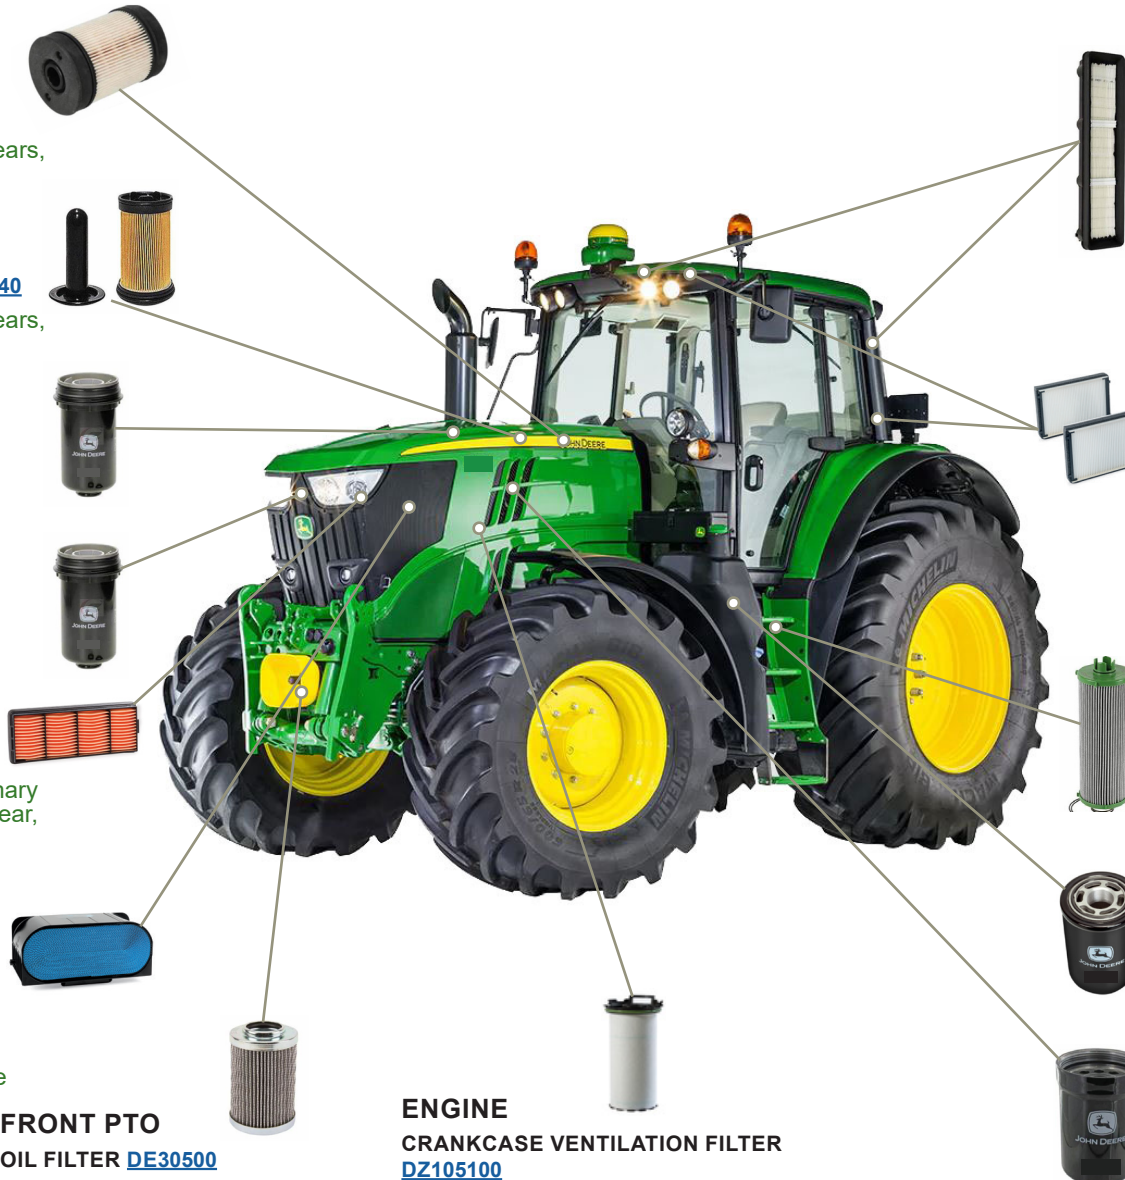

JOHN DEERE

Genuine Parts and Service

https://www.deere.com/en_US/parts/parts_by_industry/ag/fmi/filter_maintenance_information.page

CAPACITIES

6M Final Tier 4 (FT4) MY20 Series Tractors – 6155M, 6175M, 6195M

CAPACITIES (Approximate):

Fuel Tank:

6155M.....	270 L (71.3 gal)
6175M, 6195M.....	325 L (85.9 gal)

DEF Tank:

John Deere Diesel Exhaust Fluid™

6155M.....	16 L (4.2 gal)
6175M, 6195M.....	20 L (5.3 gal)

Cooling System:

Cool-Gard™ II

6155M.....	27 L (7.1 gal)
6175M, 6195M.....	28 L (7.4 gal)

Crankcase:

Plus-50™ II

.....	23.5 L (6.2 gal)
-------	------------------

Transmission / Hydraulics:

Hy-Gard™

Transmission	70 L (20.1 gal)
Extra with creeper.....	2 L (0.5 gal)
Extra with front-wheel drive	3 L (0.8 gal)
Extra with additional oil reservoir.....	14 L (3.7 gal)

Front PTO:

.....	2.6 L (0.7 gal)
-------	-----------------

Front-wheel Drive:

Hy-Gard™

6155M

Axle housing (with TLS™)	10.0 L (2.6 gal)
Axle housing (without TLS™).....	9.2 L (2.4 gal)
Final drives, per side (with brake).....	2.4 L (0.63 gal)
Final drives, per side (without brake).....	2.2 L (0.58 gal)

6175M, 6195M

Axle housing (with TLS™)	11.4 L (3.0 gal)
Axle housing (without TLS™).....	10.6 L (2.8 gal)
Final drives, per side (with brake).....	2.6 L (0.69 gal)
Final drives, per side (without brake).....	2.0 L (0.53 gal)

Air-conditioning System:

R134a Refrigerant	1225 - 1275 g (2.70 - 2.81 lb)
-------------------------	-----------------------------------

[Return to Filter Overview](#)

