

REPLACEMENT PARTS GUIDE

4044M Compact Utility Tractor: Introduction




ELECTRICAL

-  **KEY**
[RE183935](#)
-  **ROTARY SWITCH**
[LVA21501](#)
-  **BATTERY**
[TY26442B](#) (12 V)
-  **HEADLIGHT**
[R136239](#) (12 V 60/55 W)
-  **LED WORK LIGHT**
[AM143579](#) (12 V) (OOS)

FUEL AND AIR











-  **FILLER CAP**
[AL213202](#)

TRANSMISSION/ HYDRAULIC

-  **V - BELT**
[TR131486](#) (LGTH = 1112 mm,
WIDTH = 13.4 mm, TK = 9.6 mm)
-  **TRANSMISSION/HYDRAULIC OIL**
[TY22000](#) (47.3 L (12.5 gal.))
Change after every 400 Hrs or Annually.
-  **OIL FILTER**
[RE45864](#) (TRANSMISSION)
[LVA10419](#) (HYDRAULIC)
Change after every 400 Hrs or Annually.



ENGINE

-  **ENGINE OIL**
[TY26668](#) (10W-30 PLUS-50™ II),
5.4 L (1.4 gal.)
Change Every 200 Hrs or Annually, whichever comes first.
-  **FUEL FILTER**
[MIU803127](#)
Change after every 400 Hrs or Annually.
-  **AIR FILTER**
[RE68048](#) (PRIMARY)
[RE68049](#) (SECONDARY)
Change after every 600 hrs or Annually.
-  **JD MULTI PURPOSE HD LITHIUM COMPLEX GREASE**
[TY6341](#)
GREASE GUN
[TY26183](#)
Change As Required.
-  **OIL FILTER**
[M806419](#)
Change Every 200 Hrs or Annually, whichever comes first.
-  **FUEL-WATER SEPARATOR**
[MIU803221](#) (SEPARATOR)
[MIU802421](#) (FILTER ELEMENT)
Change after every 400 Hrs or Annually.
-  **DIESEL PARTICULATE FILTER**
[MIU803276](#)
-  **HOME MAINTENANCE KIT**
[TA25765](#)
-  **TIE ROD**
[LVA14951](#) (ASSEMBLY)
[LVA14960](#) (LH)
[LVA14959](#) (RH)
-  **FRONT AXLE OIL**
[TY22000](#) (JOHN DEERE LOW VISCOSITY HY-GARD™)
Change every 50/400/600 Hrs.