

# REPLACEMENT PARTS GUIDE

## 5R Final Tier 4 (FT4) Series Compact Utility Tractor - 5115R

### ENGINE

#### SECONDARY AIR FILTER

[RE253519](#)  
[SU20768](#)

Service every 1200 hours or as required per conditions.

#### FUEL TANK VENT FILTER

[H216169](#)

Clean every 1200 hours. Replace if damaged.

#### OPEN CRANKCASE VENT (OCV) FILTER

[DZ105796](#) , [DZ105100](#)

Replace as required.

#### SECONDARY FUEL FILTE

[DZ115390](#)

Service filter after 10 hours. Replace every 500 hours.

#### PRIMARY FUEL FILTER

[DZ115391](#)

Replace after every 500 hours.

### CAB

#### FRESH AIR FILTER

[RE198488](#)

Clean every 600 hours, annually, and as required per conditions (if equipped).

#### RECIRCULATION AIR FILTER

[RE195491](#)

Clean every 600 hours, annually, and as required per conditions

#### OIL FILTER

[RE504836](#)

Replace after initial 100 hours, then every 250 hours or annually. If Plus-50™ II oil and John Deere™ filter is used interval may be extended to 500 hours.

#### DIESEL EXHAUST FLUID (DEF) DOSING UNIT FILTER

[AL215053](#)

Replace within first five years and every 4500 hours. played on the Command Center™.

### TRANSMISSION

#### HYDRAULIC FILTER

[SJ11784](#) (OPEN CENTER)  
[RE577060](#) (CLOSED CENTER)

Replace after 100 hours and every 600 hours.



# CAPACITIES

## 5R Final Tier 4 (FT4) Series Compact Utility Tractor - 5115R

### CAPACITIES (Approximate):

#### **Fuel Tank:**

.....143.9L (38 gal)

#### **Cooling System:**

##### **Cool-Gard™ II**

.....16.1 L (4.25 gal)

#### **Engine Crankcase with Filter:**

##### **Plus-50™ II**

.....11.6 L (3.1 gal)

#### **Transmission and Hydraulic System:**

##### **Hy-Gard™**

.....47.5 L (12.5 gal)

#### **Mechanical Front Wheel Drive (MFWD) Axle Housing:**

##### **MFWD Differential Housing**

.....5.0 L (1.3 gal)

#### **Mechanical Front Wheel Drive (MFWD) Hubs (Each):**

##### **Hy-Gard™**

.....0.8 L (0.21 gal)

#### **Diesel Exhaust Fluid (DEF):**

##### **John Deere™ Diesel Exhaust Fluid**

.....11.4 L (3.0 gal)



# REPLACEMENT PARTS GUIDE

## 5R Final Tier 4 (FT4) Series Compact Utility Tractor - 5115R

### ENGINE



**ALTERNATOR**  
[RE555751](#) (200 A)



**FAN BELT DRIVE FAN**  
[SU36511](#) (LGTH = 2399 mm)



**BATTERY**  
[TY25879](#) (12 V)

### AXLE



**TIE ROD**  
[RE271437](#) (FRONT AXLE)  
[RE271440](#) (BALL JOINT)  
[RE271441](#) (90 DEGREES)  
[SJ30716](#) (W/ SUSPENDED MFWD)  
[SJ30717](#) (BALL JOINT)  
[SJ30718](#) (90 DEGREES)



add engine section

### CAB

#### SEAT



[SJ26049](#) (MECHANICAL JOYSTICK)  
[AL210474](#) (BOTTOM) (W/ AIR SUSPENSION)  
[AL210473](#) (BACK) (W/ AIR SUSPENSION)



**BRAKE DISK**  
[SJ27050](#)



**CLUTCH DISK**  
[SJ16888](#)