



# REPLACEMENT PARTS GUIDE

## 6J Series Tractors - 6125J (South America Edition)

### CAB



 **FRESH AIR FILTER**  
[AL225552](#)  
Replace annually.



### TRANSMISSION / HYDRAULIC


 **OIL FILTER**  
[AL221066](#)  
**OIL FILTER**  
[AL203061](#)  
Replace initially after 100 hours and after every 750 hours.



### ENGINE

 **PRIMARY FUEL FILTER**  
[RE546336](#) (FILTER ELEMENT)  
 **FINAL FUEL FILTER**  
[RE544394](#) (FILTER ELEMENT)  
Replace after every 500 hours.

 **PRIMARY AIR FILTER**  
[AL172780](#)  
 **SECONDARY AIR FILTER**  
[AL150288](#)  
Replace every 250 hours and annually.

 **OIL FILTER**  
[RE504836](#)  
Replace initially after 100 hours and every 375 hours, every 500 hours and annually.

# REPLACEMENT PARTS GUIDE

## 6J Series Tractors - 6125J (South America Edition)

### CAPACITIES (Approximate):

#### **Fuel Tank:**

.....240 L (63.4 gal)

#### **Cooling System:**

##### **Cool-Gard™ II**

Non-Emissions Certified Engine.....20 L (5.3 gal)

.....26.7 L (7.1 gal)

#### **Transmission and Hydraulic System:**

##### **Hy-Gard™**

.....65 L (17.17 gal)

#### **Front Axle:**

##### **Hy-Gard™**

Front Axle Differential Housing.....7.5 L (2 gal)

Front Axle Final Drive Housing (each).....0.75 L (0.2 gal)

# REPLACEMENT PARTS GUIDE

## 6J Series Tractors - 6125J (South America Edition)

### ENGINE



**BRAKE DISK**  
[RE35512](#) (HOUSING PLANETARY BRAKE)  
[RE321696](#) (REVERSE BRAKE HOUSING)  
[AL171954](#)



**BATTERY**  
[SJ10989](#)



**CLUTCH DISK**  
[RE321692](#) (FORWARD CLUTCH)  
[RE326609](#) (DIRECT DRIVE CLUTCH)



**ALTERNATOR**  
[AL219434](#) (90 A)  
[AL166645](#) (14 V / 90A)  
[AL166646](#) (14 V / 120 A)



**BELT DRIVE**  
[CQ51921](#)  
[CQ58873](#) (LGTH = 2455 mm)



### CAB



**SEAT**  
[AL219772](#) (W/ MECHANICAL SUSPENSION)  
[DQ66167](#)  
[BL16299](#) (W/ AIR SUSPENSION)  
[AL210467](#) (SEAT BACK)  
[AL204297](#) (WITH SEAT BELT)  
[AL216574](#) (OPERATORS SEAT)  
[DQ63806](#) (BOTTOM)  
[DQ58191](#) (KIT)  
[DQ58190](#) (MECHANICAL SUSPENSION)  
[AL173569](#) (INSTRUCTIONAL SEAT)  
[AL226174](#) (W/ARM REST)

### AXLE



**TIE ROD**  
[AL151283](#) (TIE ROD ASSEMBLY)  
[DQ67133](#) (TIE ROD END)  
[DQ67134](#)