 


Filter Overview with Service Intervals

 
9070 STS Combines

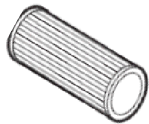

Engine, Air, Secondary

AH212295 (9570 – 9870)


Change Secondary filter only with primary filter. Change annually or as required with Primary Air Filter.



Engine, Air, Primary

AH222225 (9570 – 9870)

 
Change annually and clean or change as required

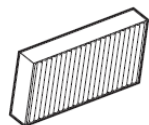

Recirculation Air Filter

H220870 (9570-9870)

 Clean or replace every 200 hours and as required

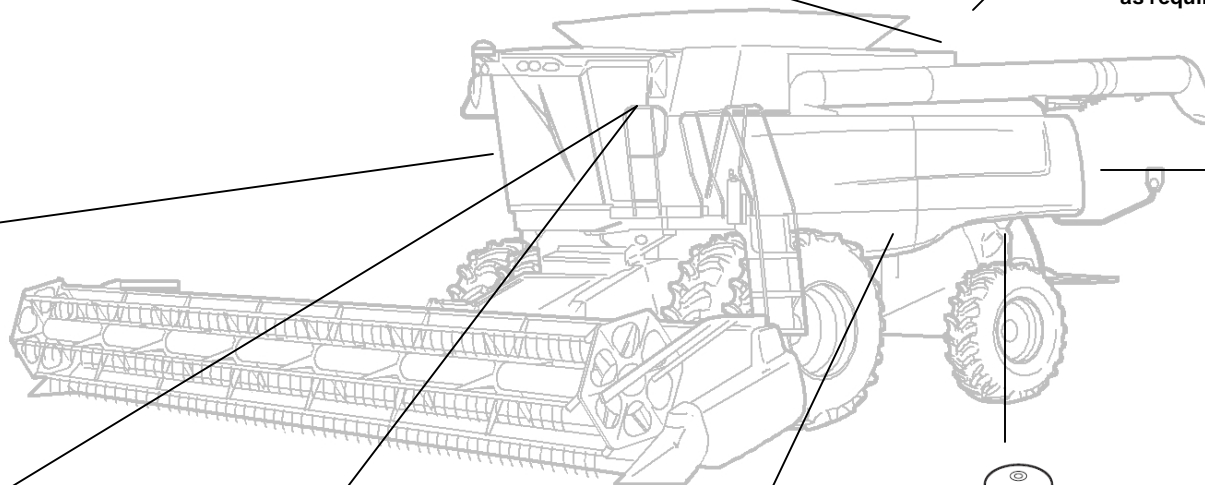

Engine Fuel Filters

 
RE522878 (9570)

RE525523 Filter Kit (9670 & 9770)

RE532952 (Primary 9870)

RE533910 (Secondary 9870)


Replace fuel filters every 400 hours



Heavy Duty Cab Air Filter

AH168783 (9570 – 9870)

 
Clean or replace every 200 hours and as required.



Cab Air Filter

AH115833 (9570 - 9870)

 Clean or replace every 200 hours and as required

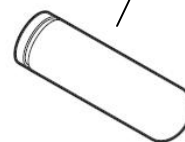

Charge Pump/Main Hydraulic/Main Engine Gear Case Filter

AH128449 (9570 - 9870)

Filter change interval for all three filters is 400 hours



Engine Oil Filter

RE504836 (9570)

RE509672 (9670 & 9770)

RE530107 (9870)

Replace after 100 hours and then every 250 hours. Fill Crankcase with seasonal viscosity grade oil or Torq-Gard Supreme™ (250 hours change interval). If using Plus-50™ oil and a John Deere filter, the service interval can be extended by 50 percent. Example: 250 hours extends to 375 hours.